


RUNNER KIT BOLT DIMENSIONS

FRONT

BACK

KENAI, KENAI PRO THERMAL, KENAI PRO THERMAL STEALTH


Cut at 38 inches

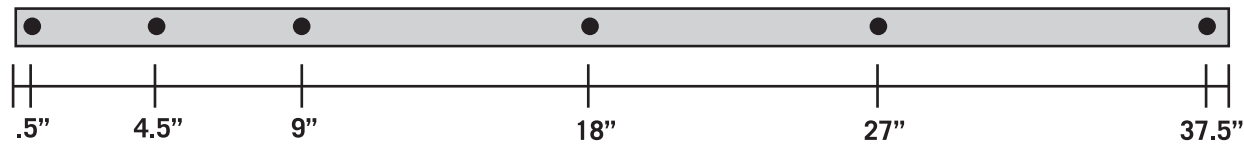

Always measure front-to-back

VOYAGER X THERMAL, THERMAL X, ICETEAM VOYAGER X THERMAL, VOYAGER STEALTH THERMAL


Do NOT Cut

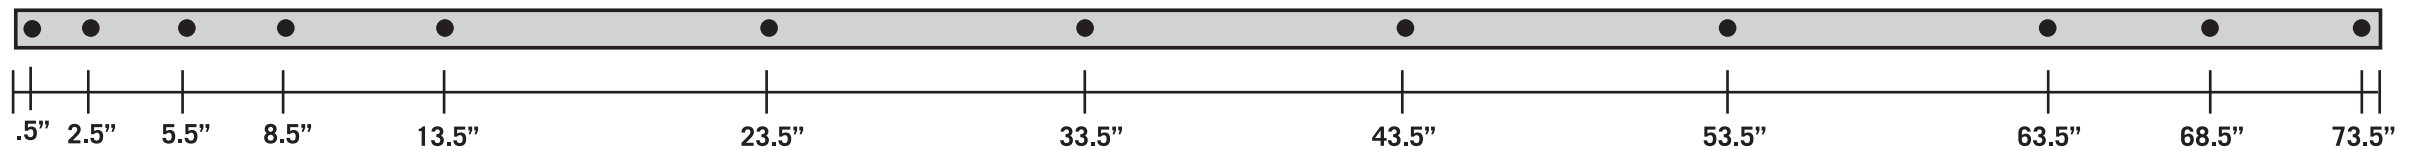

Always measure front-to-back

ALL YUKON MODELS, WARRIOR THERMAL


Cut at 56 inches

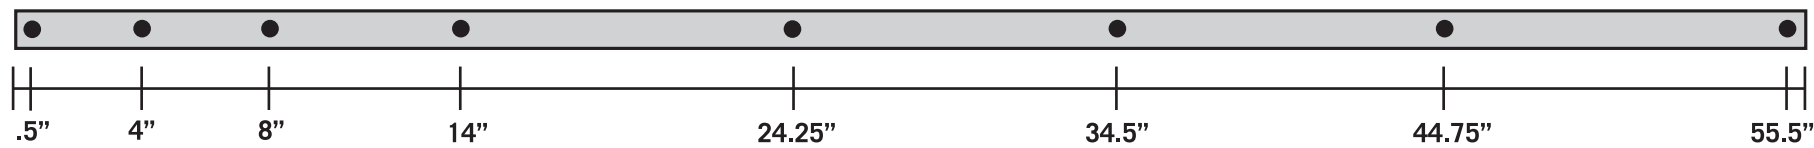

Always measure front-to-back

2010 - 2018 NANOOK AND NANOOK THERMAL, BLAZER, BLAZER STEALTH


Cut at 55 inches

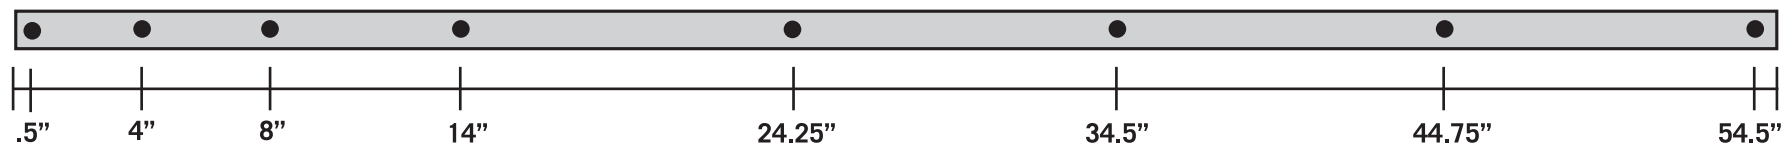

Always measure front-to-back

SCOUT


Cut at 40 inches

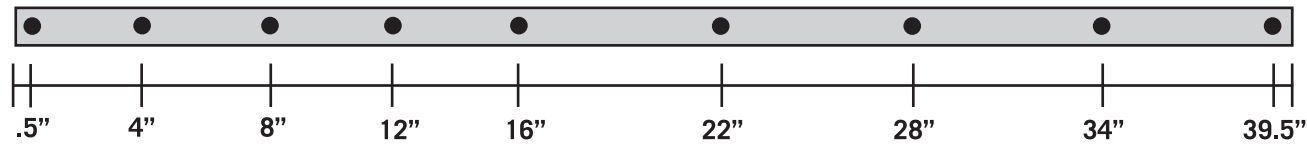

Always measure front-to-back

NANOOK XL, NANOOK XL THERMAL


Do NOT Cut

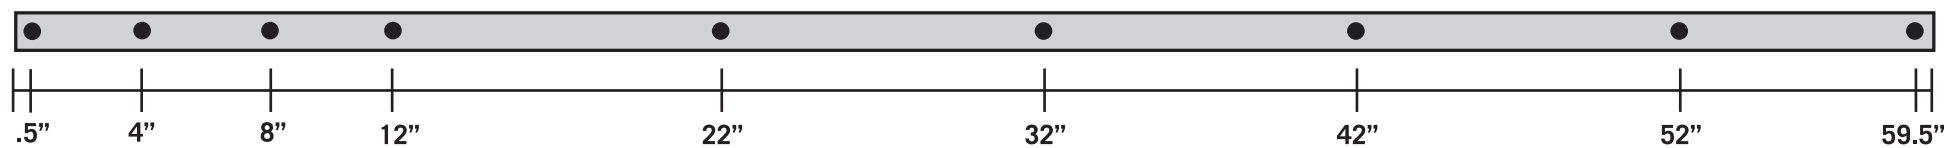

Always measure front-to-back

SCOUT XL THERMAL, LEGEND XL THERMAL, ICETEAM LEGEND THERMAL XL


Do NOT Cut

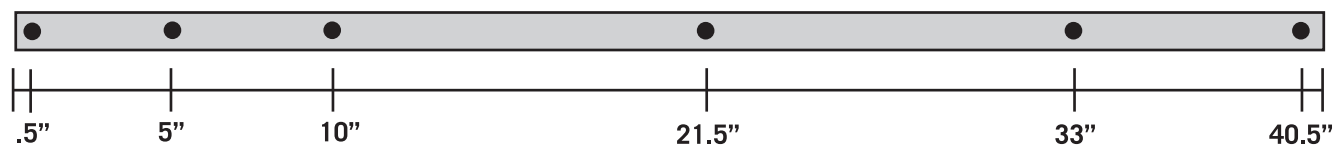

Always measure front-to-back

X2, X4 LARGE NORDIC SLED

Do NOT Cut

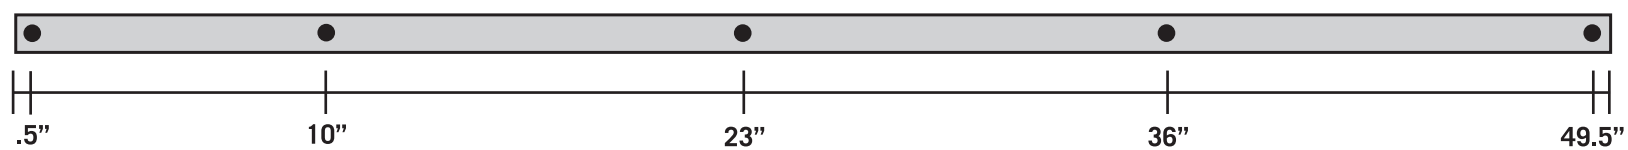

Always measure front-to-back

1. Drill first hole 1/2-inch into each runner. This will be where your first bolt start.
2. Measure the runner to the specified length and cut.
3. Using a permanent marker, indicate hole locations according to model diagram shown.
4. Use a 5/32 drill bit, drill holes in the center of the runners.
5. Using the hardware provided, screw runner into the bottom of the tub base. A heat gun may be required to bend the shape of the runners on some models.
6. Apply a dab of grease to each bolt before securing runners to the tub.