

200T CASEMENT WINDOWS

RHR OPERATING SASH ONLY, SHOWN

LOCK
SIDE

OUTSWING CASEMENT VENT

HINGE
SIDE


SETTING BLOCKS
(4) REQUIRED FOR
CROSS-BLOCKING

INSTRUCTIONS:


- PERIMETER FRAME MUST BE INSTALLED PLUMB, SQUARE, AND LEVEL. PRIOR TO GLAZING, THE WINDOW MUST BE IN PROPER ALIGNMENT WITHOUT TWIST OR BOW.
- IF NECESSARY ALIGN SASH WITHIN FRAME BY MAKING MINOR ADJUSTMENT TO HARDWARE.
- APPLY 1/8" x 1/2" PRE-SHIMMED GLAZING TAPE (BY GLAZING CONTRACTOR) @ EXTERIOR.
- SET GLASS USING DIAGONAL CROSS-BLOCKING METHOD AS SHOWN IN ILLUSTRATION.
- INSTALL INTERIOR GLASS STOPS AND WEDGE GASKET AS ILLUSTRATED BELOW.
- MAKE FINAL FIELD ADJUSTMENTS TO OPERATING SASH & HARDWARE TO MAINTAIN AN EVEN PERIMETER MARGIN, SMOOTH OPERATION, & PROPER ENGAGEMENT OF THE PERIMETER BULB WEATHER SEAL.

LUBRICATION (IF REQUIRED)


- GEAR DRIVE, ROTO OPERATORS AND CAM LOCKS
-USE LITHIUM GREASE.
- HINGES AND SLIDING OR ROTATING PARTS
-USE LITHIUM GREASE.

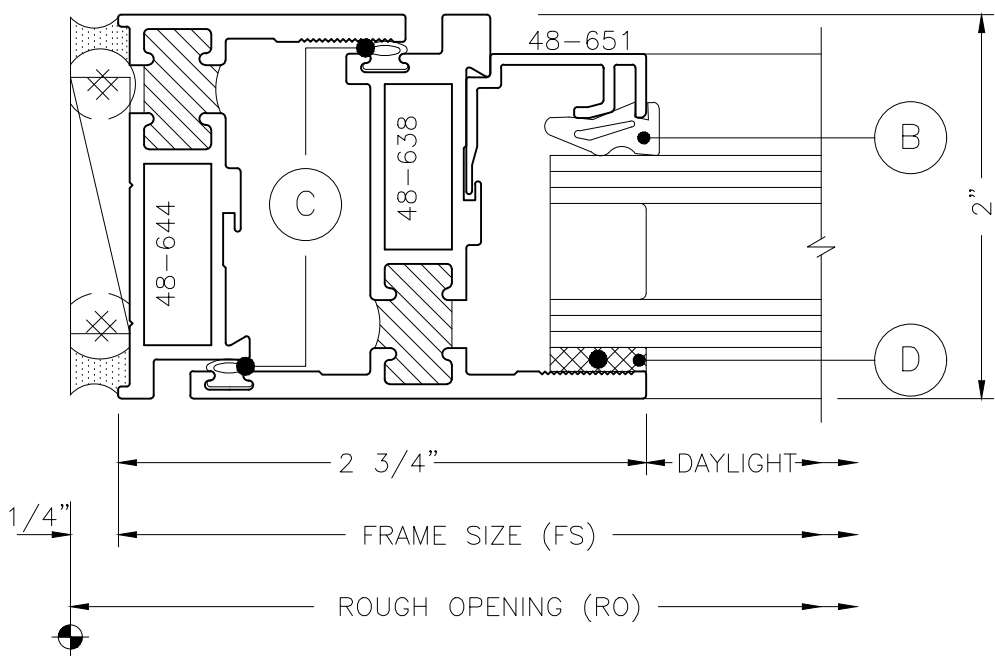


EQUAL LEG JAMB

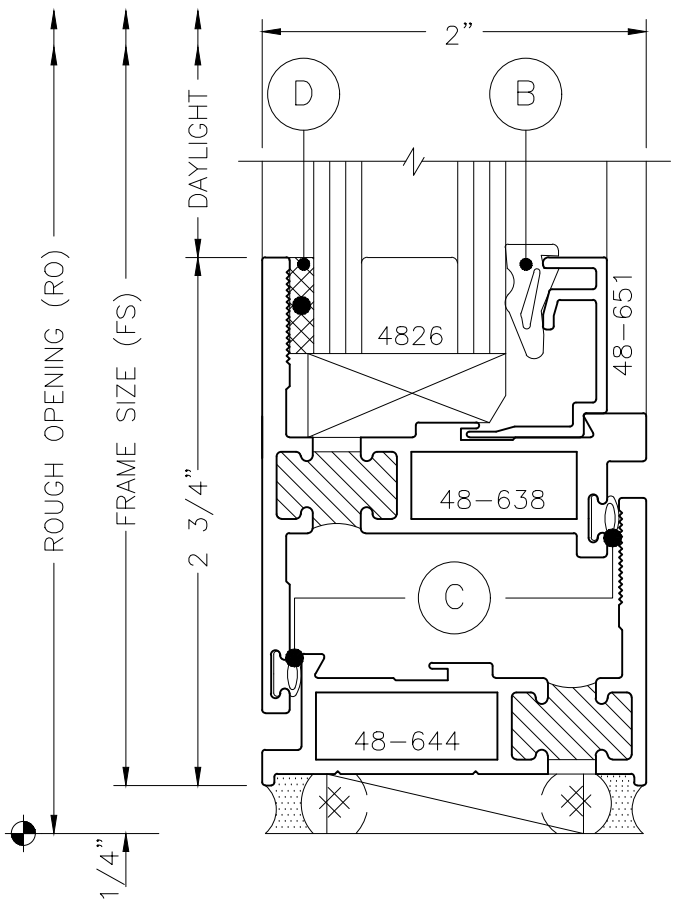


EQUAL LEG SILL

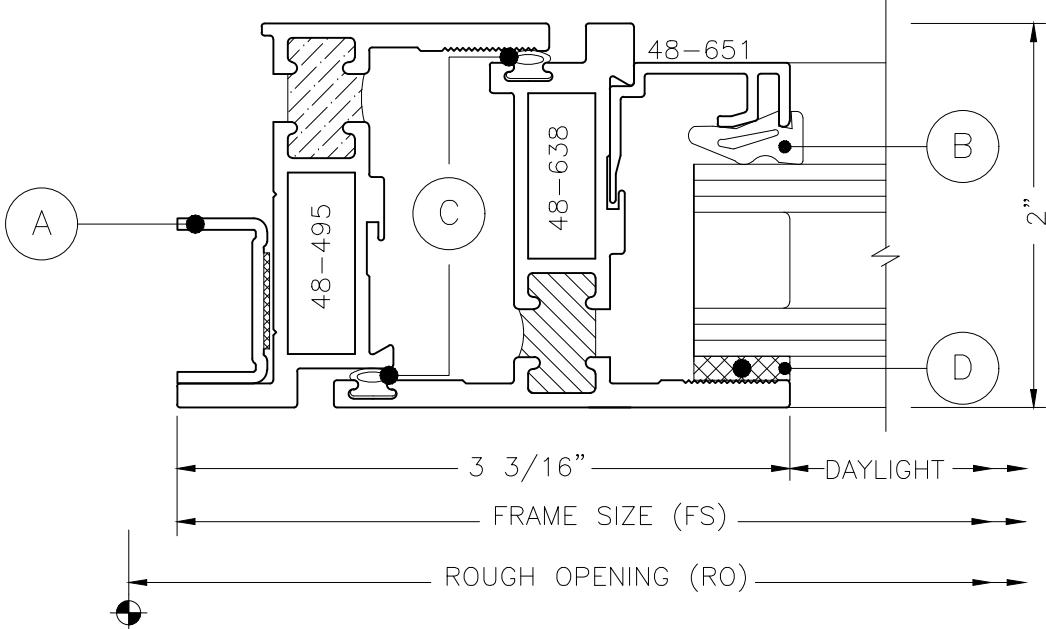


1/2" GLAZING LEG JAMB
WITH GLAZING ADAPTOR

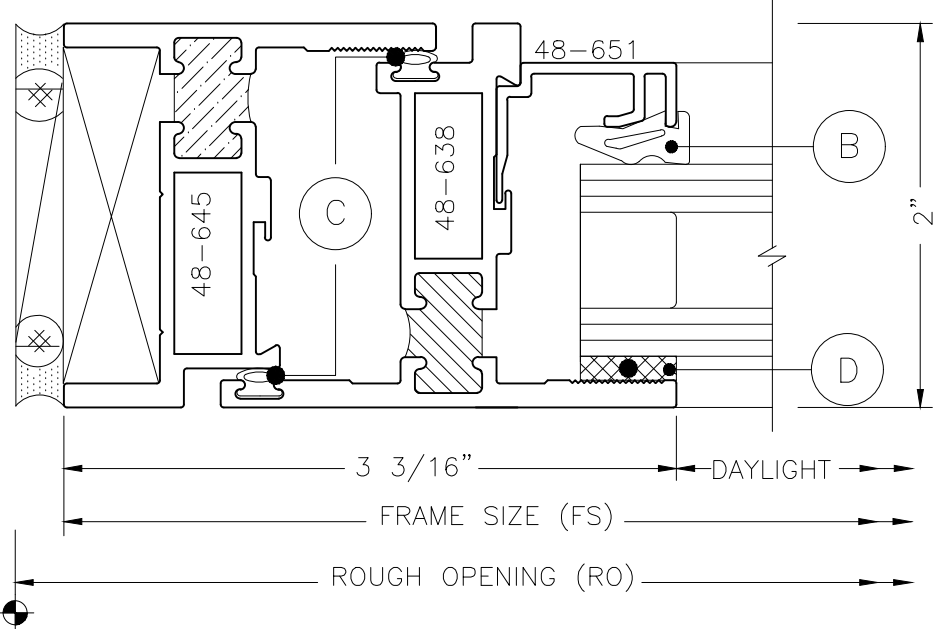


1/2" EXTENDED LEG JAMB

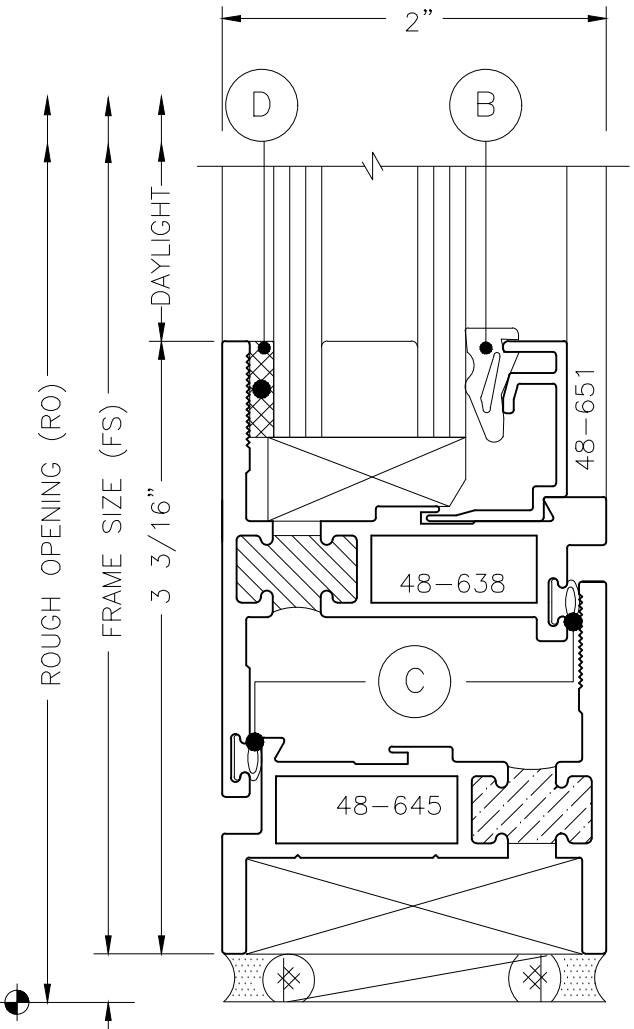


1/2" EXTENDED LEG SILL

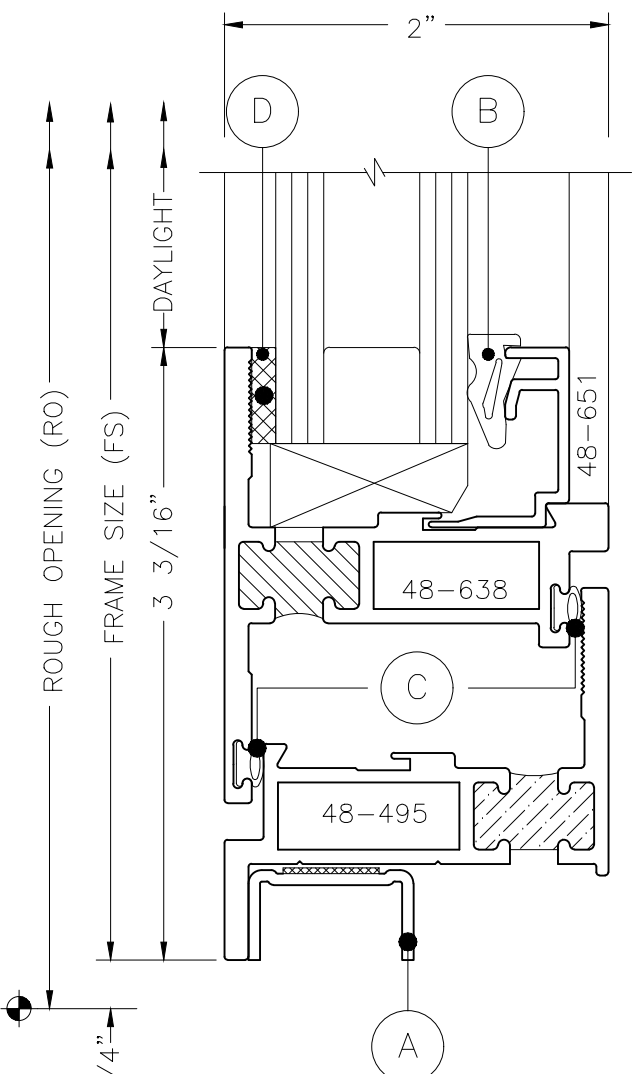

1/2" GLAZING LEG SILL
WITH GLAZING ADAPTOR

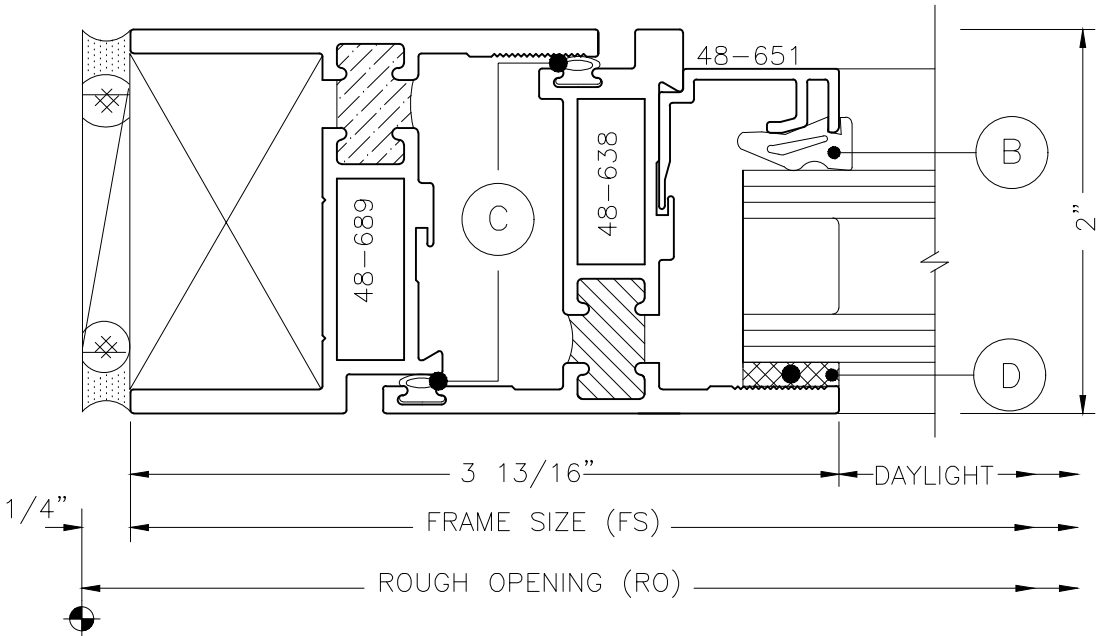

1" EXTENDED LEG JAMB

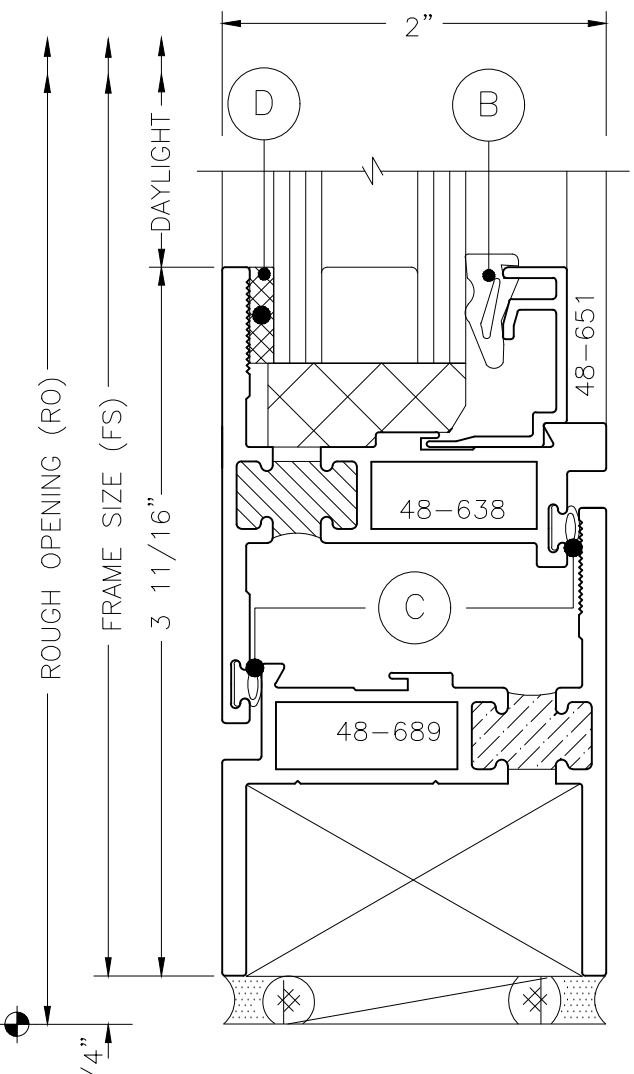

1" EXTENDED LEG SILL

NOTE: PER INDEPENDENT
LABORATORY TESTING, CMI
REQUIRES BOTH INTERIOR
AND EXTERIOR PERIMETER
FRAME SEALANT TO MEET
SPECIFIED PERFORMANCE.

CASEMENT
OPTIONS

GLAZING STOPS

- 48-651
FOR 1" GLAZING
- 48-650
FOR 1/4" GLAZING

LOCKING HDWE

- CAM HANDLE
- ROTO OPERATOR
- CUSTODIAL LOCKS
- LEVER LOCKS

HINGE HDWE


- BUTT HINGES
- 4 BAR HINGES
- EGRESS HINGES

SCREEN TYPES

- FIBERGLASS
- ALUMINUM
- STAINLESS STEEL

PARTS

A

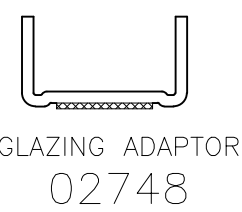


GLAZING ADAPTOR
02748

B



PUSH IN GASKET
INTERIOR/EXTERIOR
84-815
E.P.D.M.

C

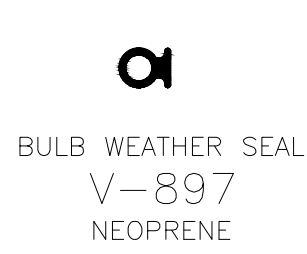


BULB WEATHER SEAL
V-897
NEOPRENE

D

1/8" x 1/2"
PRE-SHIMMED
*REQUIRED

*BY GLAZING CONTRACTOR

ISOMETRIC SILL SECTION

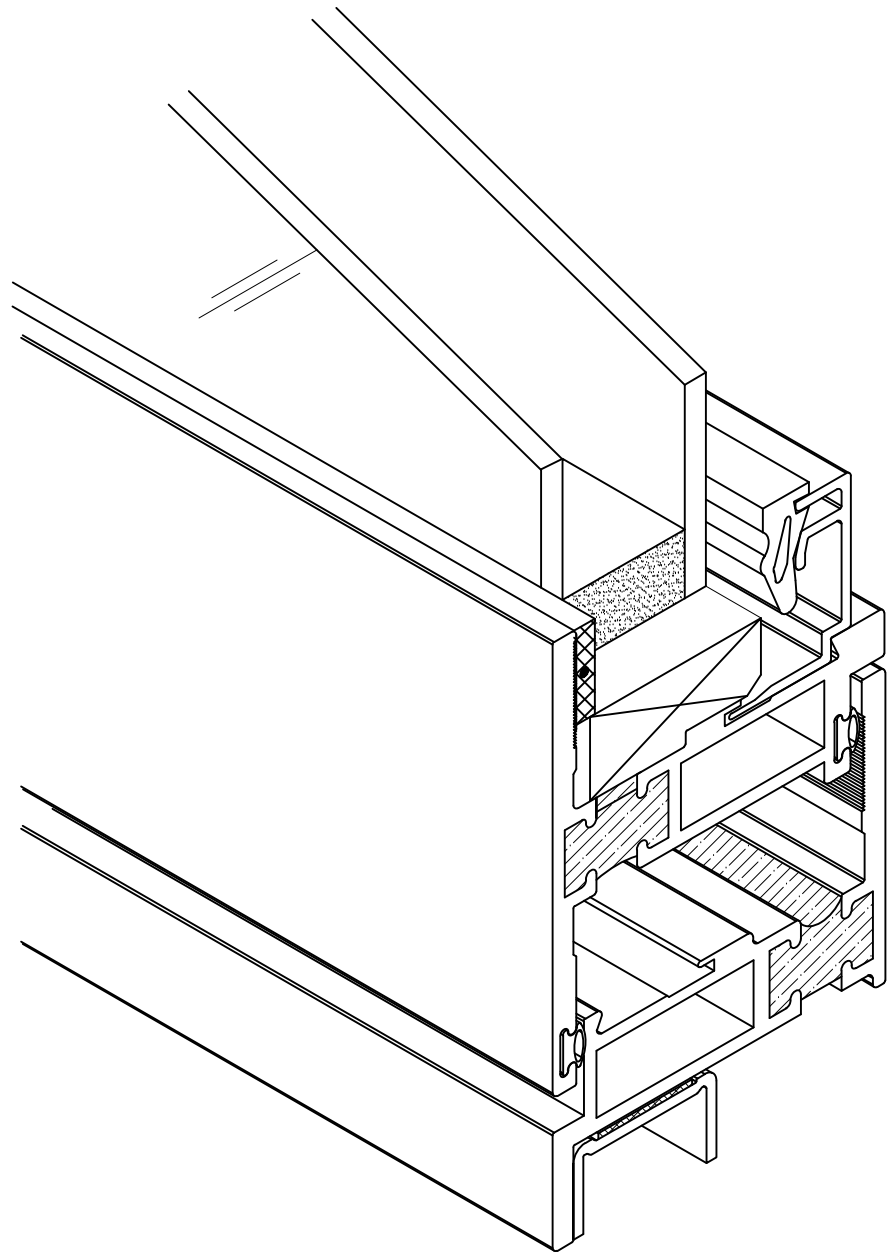

HQ + MANUFACTURING
20621 HWY 25 N.
DESMET, SOUTH DAKOTA 57231
TOLL FREE: 800-324-2070
PHONE: (605) 854-3326
FAX: (605) 584-3620

SALES + ENGINEERING
1630 101ST AVE NE, SUITE 130
BLAINE, MN 55449
TOLL FREE: 800-334-1533
PHONE: (763) 560-5567
FAX: (763) 560-6399

MANUFACTURING
57135 WOODHOUSE DR.
DOWAGIAC, MI 49047
PHONE: (269) 782-0299

WWW.CMIARCH.COM

200T CASEMENT FRAME ASSEMBLY

SHEET #:

200TC-1

UPDATED: AUGUST 25, 2017